SINK FLANGE WITH REMOVAVBLE STRAINER

Cat. No.
I5588

BARCLAY

INSTALLATION INSTRUCTIONS

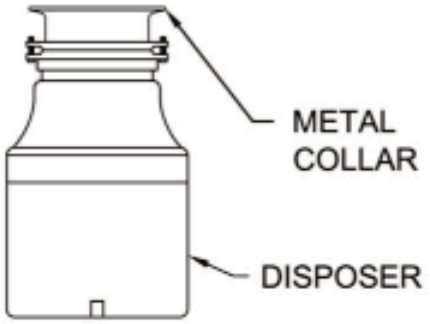

1. MAKE SURE DISPOSER IS INSTALLED PROPERLY AND CLAMP IS SECURE

2. CLEAN INSIDE OF METAL COLLAR

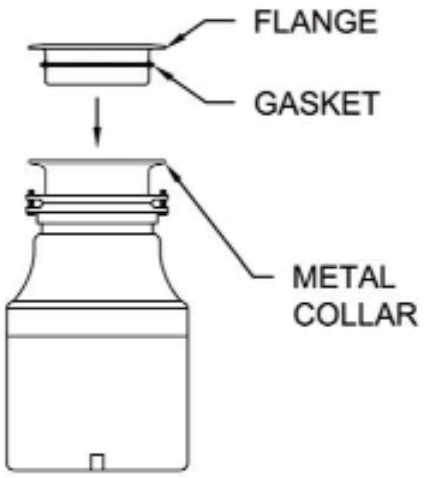

3. LUBRICATE FLANGE GASKET WITH WATER AND PUSH FLANGE SLOWLY INTO THE METAL COLLAR

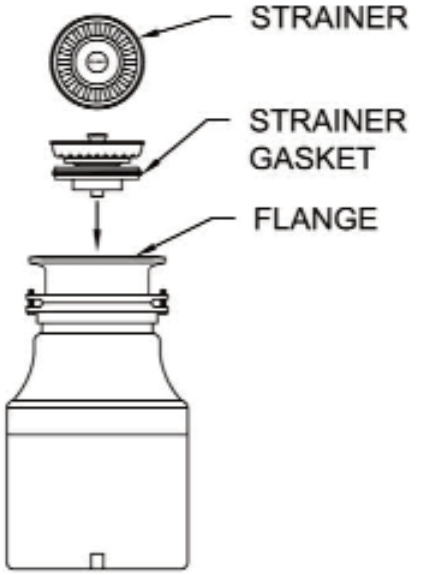

4. LUBRICATE GASKET ON STRAINER WITH WATER AND PUSH SLOWLY INTO THE FLANGE